


# Assembly instructions

## Roll Screen Design


1. Roll Screen Design is supplied together with a padded carry case.



2. Please take care not to withdraw the safety pin on the base until the print has been secured at the bottom.

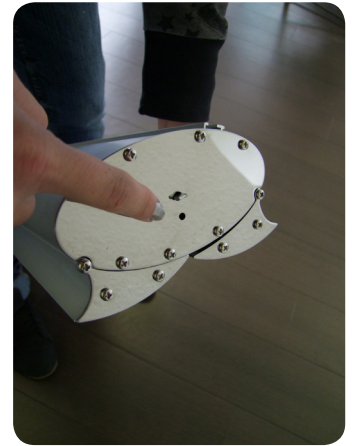

3. Fold out the two feet to produce a stable base.

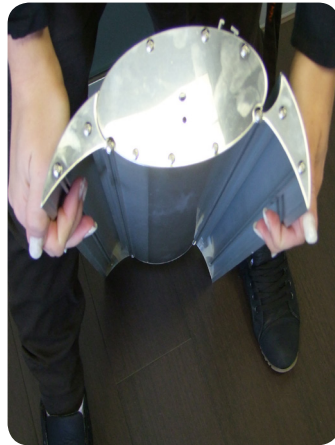

4. Fit the whole rod together.



5. To ensure greater stability when assembling, put your foot on the foot of the Roll-Screen Design. Now you can safely lift up the print.



6. Clamp the rod at the top first. Then use the rod to push the print fully up.



7. To finish, simply clamp the rod into the base.



8. In no time at all your print will be standing safe and secure.

